


Keep equipment safe and mobile with the IPS SecureCart

The IPS SecureCart delivers both the form and functionality you need to keep equipment mobile and protected.

- Elevates UPSs, printers, CPUs and other equipment off of the floor
- Enables devices to be easily moved as needed
- Prevents equipment from being damaged by liquids, dust and other sources
- Robust design provides durable protection
- Easy to install
- Multiple carts can be bolted together to accommodate larger equipment
- Two models (black and white) available from stock
- Also available in custom sizes, configurations and colors
- Ships with all hardware and necessary components
- Each cart weighs less than 10 lbs.

The Intelligent Power Solutions SecureCart keeps equipment safe from floor-level hazards while also making it easy to move as needed. By conveniently elevating equipment — including uninterruptible power systems (UPSs), printers, CPUs, computers and power conditioners — the **SecureCart** protects devices from being damaged by liquids, dust and other potentially detrimental agents. In addition, the wheeled carts slide easily if attached equipment needs to be relocated or temporarily moved in order to clean behind other devices or instruments.

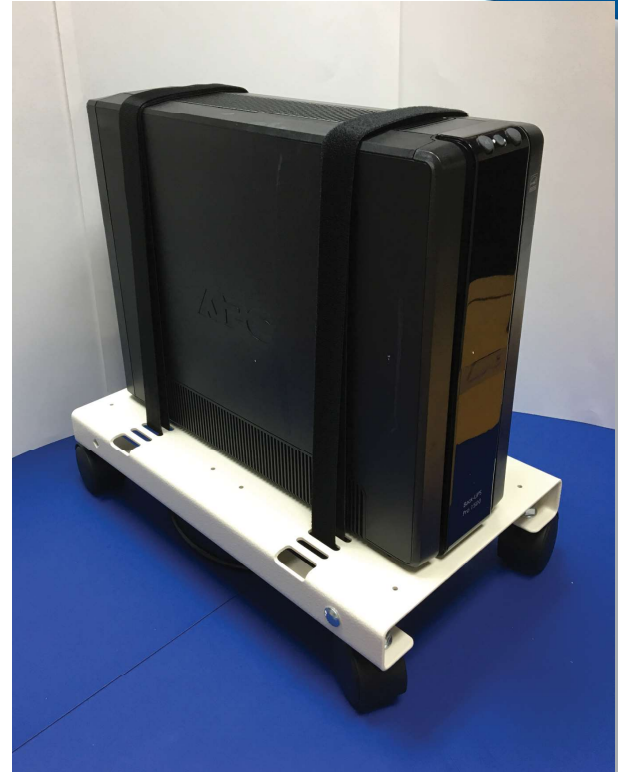

The **SecureCart** is ideal for a wide variety of applications, including hospitals and labs, office buildings, computer rooms, data centers and other instances that require equipment to be moved or raised off of the floor. With a robust yet aesthetically pleasing design, the SecureCart provides a cost-effective solution to keep devices off the floor and safe from dusts, fluids and other potential perils.

Available from stock in two standard configurations, the **SecureCart** is easy to assemble and deploy. Carts may also be completely customized by size, configuration and color. In addition, multiple carts can be easily bolted together to accommodate larger UPSs or equipment. The SecureCart is shipped with all components necessary to mount equipment onto the cart, including Velcro straps, metal sides and anti-skid pads.






SecureCart Specifications

Installation

Attaching equipment to the **SecureCart** is easy. Simply route the two included Velcro straps through the mounting holes and place the device onto the center of the cart, using included non-skid pads if desired. After placing the equipment on the cart, pull the straps to the top of the unit and fold them across the unit, tighten and repeat for the other strap. Straps may then be cut to the desired length.

Two or more **SecureCart** can be bolted together for side-by-side installation. Each cart comes with a 7/16 mounting bolt attached. To link multiple carts together, use the bolts from each unit and attach the two carts through the same holes.

Model Selection Guide

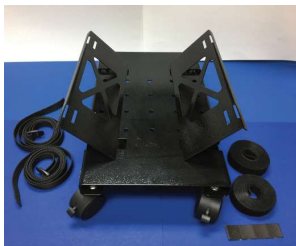

Black Carts

Include (2) nylon straps with buckles, (2) metal sides, and anti-slip pads

Weight: 9 lbs.

Dimensions: 4" H x 10.25" W x 16" D



White Carts

Includes two Velcro straps and anti-slip pads

Weight: 9 lbs.

Dimensions: 4" H x 9.5" W x 16" D

Custom Carts

Intelligent Power Solutions can completely customize the **SecureCart** based on your individual size, color and configuration needs. Please contact us for more information.

